

HONDA V33.00 Diagnostics List (Note:For reference only)

Car Name	Year	System	Functions						
			Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	Others
ACCORD	~1998	ENGINE		√	√	√	√		
		SRS		√	√	√			
	1999~2003	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√			
	2004~	ENGINE		√	√	√	√	1.Adjustment(*)	
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√	√	1.Adjustment(*)	
		OPDS						1.Adjustment(*)	
		SWS		√	√			1.Check(*) 2.Adjustment(*)	
		BCM		√	√	√	√	1.Adjustment(*)	
		IMA(HYBRID)		√	√	√	√		
		Keyless Access System			√	√	√	√	1.Keys Function(*)
	IMMOBILIZER	√						1.Keys Function(*)	
	1999~2003	ENGINE		√	√	√	√		

		VTM-4		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
ACURA RDX	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
ACURA RSX	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
ACURA TSX	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
AIRWAVE	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)

ASCOT	1999~	ENGINE		√	√	√	√		
		SRS		√	√	√			
AVANCIER	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
CAPA	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
CITY	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
	~2004	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMA(HYBRID)		√	√	√	√		

CIVIC		IMMOBILIZER	√						1.Keys Function(*)	
	2005~	ENGINE		√	√	√	√			
		AT		√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√				
		OPDS		√	√	√		1.Adjustment(*)		
		EPS		√	√	√	√			
		BCM		√	√	√	√	1.Check(*) 2.Adjustment(*)		
IMMOBILIZER	√						1.Keys Function(*)			
CR-V	~2003	ENGINE		√	√	√	√			
		AT		√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√				
	2004~	ENGINE		√	√	√	√			
		AT		√	√	√	√			
		ABS		√	√	√	√			
		SRS		√	√	√				
		OPDS		√	√	√		1.Adjustment(*)		
		BCM		√	√	√	√	1.Check(*) 2.Adjustment(*)		
	IMMOBILIZER	√						1.Keys Function(*)		
	CR-X/delSol	1999~	ENGINE		√	√	√	√		
			AT		√	√	√	√		
ABS				√	√	√	√			

CR-X/DELTA	1999~	SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
CROSSROAD	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
DOMANI	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
EDIX	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
ELEMENT	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)

ELYSION	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		OPDS						1.Adjustment(*)	
		BCM		√	√	√	√	1.Check(*) 2.Adjustment(*)	
		Keyless Access System		√	√	√	√		1.Keys Function(*)
		IMMOBILIZER	√						1.Keys Function(*)
FIT	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
FR-V	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
INSIGHT	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		

INSIGHT	1999~	SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
INSPIRE	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
INTEGRA	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
JAZZ	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
LAGREAT	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		

		IMMOBILIZER	√						1.Keys Function(*)
LEGEND	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
LIFE	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
LOGO	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
MOBILIO	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
		ENGINE		√	√	√	√		
		AT		√	√	√	√		

MR-V	1999~	ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						
NSX	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						
ODYSSEY	~2003	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
	2004~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		OPDS							1.Adjustment(*)
		BCM		√	√	√	√		1.Check(*) 2.Adjustment(*)
		IMMOBILIZER	√						
ORTHIA	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			

		IMMOBILIZER	√						1.Keys Function(*)
PARTNER	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
PILOT	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		TPMS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
PRELUDE	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
RAFAGA	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
		ENGINE		√	√	√	√		

RIDGELINE	1999~	AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
S-MX	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
S2000	1999~	ENGINE		√	√	√	√		
		SRS		√	√	√	√		
SHUTTLE	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
SPIKE	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
		ENGINE		√	√	√	√		
		AT		√	√	√	√		

STEP WGN	1999~	ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
STREAM	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		IMMOBILIZER	√						1.Keys Function(*)
		BCM		√	√	√	√	1.Check(*) 2.Adjustment(*)	
TODAY	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
That's	1999~	ENGINE		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)
VAMOS	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
		IMMOBILIZER	√						1.Keys Function(*)

Z	1999~	ENGINE		√	√	√	√		
		SRS		√	√	√			
		EPS		√	√	√	√		
Zest	1999~	ENGINE		√	√	√	√		
		AT		√	√	√	√		
		ABS		√	√	√	√		
		SRS		√	√	√			

(*):Tested;

(?):Manual on website(www.x431.com);

Note:The final interpretation of the products belongs to LAUNCH TECH CO.,LTD.;