

Volvo V32.00 Diagnostics List (Note: All description rights reserved by LAUNCH TECH.CO.,LTD)

VEHICLE MODEL	YEAR	SYSTEM	TYPE	Functions							Special Function (* :Tested ,?:Manual on website)	Others	
				VERSION INFO	Read DTC	Erase DTC	READ EXTEND DTC	Data stream	ACTUATION				
	1996	General Service									Resetting the SRL(Service Reminder Lamp)to zero		
		ECM	Fenix5.1	√	√	√		√	√				
		TCM	AW50-42	√	√	√		√					
		ABS		√	√	√		√	√				
		SRS		√	√	√		√					
		IC		√	√	√		√	√				
		Immobilizer		√	√	√		√	√				
		VGLA		√	√	√		√	√				
		CPM		√	√	√		√	√				
		DSA		√	√	√		√	√				
	CCM		√	√	√		√	√					
	RTI		√	√	√		√	√					
	1997	General Service										Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	Fenix5.1	√	√	√		√	√				
		TCM	AW50-42	√	√	√		√					
		ABS		√	√	√		√	√				
		SRS		√	√	√		√					
		IC		√	√	√		√	√				
		Immobilizer		√	√	√		√	√				
		VGLA		√	√	√		√	√				
		CPM		√	√	√		√	√				
		DSA		√	√	√		√	√				
	CCM		√	√	√		√	√					
	RTI		√	√	√		√	√					
	1998	General Service										Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	Fenix5.1	√	√	√		√	√				
		TCM	AW50-42	√	√	√		√					
		ABS		√	√	√		√	√				
		SRS		√	√	√		√					
		IC		√	√	√		√	√				
		Immobilizer		√	√	√		√	√				
		VGLA		√	√	√		√	√				
		CPM		√	√	√		√	√				
DSA			√	√	√		√	√					
CCM		√	√	√		√	√						
RTI		√	√	√		√	√						
1999	General Service										Resetting the SRL(Service Reminder Lamp)to zero		
	ECM	B4204S2	√	√	√		√	√					
		B4184SJ	√	√	√		√	√					
		B5254S	√	√	√		√	√					
		B5244S	√	√	√		√	√					
	TCM	AW50-42	√	√	√		√	√					
	ABS		√	√	√		√	√					
SRS		√	√	√		√							

S40(-04)

	Immobilizer		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	CPM		✓	✓	✓		✓	✓	
	DSA		✓	✓	✓		✓	✓	
2000	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW50-42	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓	✓	
	Immobilizer		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	DSA		✓	✓	✓		✓	✓	
CPM		✓	✓	✓		✓	✓		
2001	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓	✓	
	Immobilizer		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	DSA		✓	✓	✓		✓	✓	
CPM		✓	✓	✓		✓	✓		
2002	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓	✓	
	Immobilizer		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	

		DSA	✓	✓	✓		✓	✓	
		CPM	✓	✓	✓		✓	✓	
2003	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓	✓	
	Immobilizer		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	DSA		✓	✓	✓		✓	✓	
CPM		✓	✓	✓		✓	✓		
2004	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓	✓	
	Immobilizer		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	DSA		✓	✓	✓		✓	✓	
CPM		✓	✓	✓		✓	✓		
	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
	B5234T7	✓	✓	✓		✓	✓		
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters	

2001	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
			✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓	
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	PHM		✓	✓	✓	✓	✓	✓	
	AUM		✓	✓	✓	✓	✓	✓	
	SWM		✓	✓	✓	✓	✓	✓	
SAS		✓	✓	✓	✓	✓	✓		
RTI		✓	✓	✓	✓	✓	✓		
AEM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓		
ECM	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems
	B5244S	✓	✓	✓	✓	✓	✓	✓	
	B6304S3	✓	✓	✓	✓	✓	✓	✓	
	B6294T	✓	✓	✓	✓	✓	✓	✓	
	B6284T	✓	✓	✓	✓	✓	✓	✓	
	B5204T4	✓	✓	✓	✓	✓	✓	✓	
	B5204T3	✓	✓	✓	✓	✓	✓	✓	
	B5244SG	✓	✓	✓	✓	✓	✓	✓	
	B6294S2	✓	✓	✓	✓	✓	✓	✓	
	B5244S2	✓	✓	✓	✓	✓	✓	✓	
	B5254T2	✓	✓	✓	✓	✓	✓	✓	
	B5234T3	✓	✓	✓	✓	✓	✓	✓	
	B5204T5	✓	✓	✓	✓	✓	✓	✓	
	B5254T4	✓	✓	✓	✓	✓	✓	✓	
B5234T7	✓	✓	✓	✓	✓	✓	✓		
Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓	✓	Programming the optimizing parameters
	AW55-50SN	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change

2002	TCM	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS	✓	✓	✓	✓	✓	✓	✓	
	CEM	✓	✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM	✓	✓	✓	✓	✓	✓	✓	
	REM	✓	✓	✓	✓	✓	✓	✓	
	DIM	✓	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM	✓	✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM	✓	✓	✓	✓	✓	✓	✓	
	DDM	✓	✓	✓	✓	✓	✓	✓	1.Initialize the window
	CCM	✓	✓	✓	✓	✓	✓	✓	1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters
	PHM	✓	✓	✓	✓	✓	✓	✓	
	AUM	✓	✓	✓	✓	✓	✓	✓	
	SWM	✓	✓	✓	✓	✓	✓	✓	
	SAS	✓	✓	✓	✓	✓	✓	✓	
	RTI	✓	✓	✓	✓	✓	✓	✓	
	AEM	✓	✓	✓	✓	✓	✓	✓	
	CPM	✓	✓	✓	✓	✓	✓	✓	
	General Service								
ECM	B5244S	✓	✓	✓		✓	✓		
	B6304S3	✓	✓	✓		✓	✓		
	B6294T	✓	✓	✓		✓	✓		
	B6284T	✓	✓	✓		✓	✓		
	B5204T4	✓	✓	✓		✓	✓		
	B5204T3	✓	✓	✓		✓	✓		
	B5244SG	✓	✓	✓		✓	✓		
	B6294S2	✓	✓	✓		✓	✓		
	B5244S2	✓	✓	✓		✓	✓		
	B5254T2	✓	✓	✓		✓	✓		
	B5234T3	✓	✓	✓		✓	✓		
	B5204T5	✓	✓	✓		✓	✓		
B5254T4	✓	✓	✓		✓	✓			
B5234T7	✓	✓	✓		✓	✓			
Diesel Eng	D5244T	✓	✓	✓		✓	✓		Programming the optimizing parameters
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV-GT	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50-42	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change

	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS	✓	✓	✓	✓	✓	✓		
	CEM	✓	✓	✓	✓	✓	✓	Reading alarm cause	
	UEM	✓	✓	✓	✓	✓	✓		
	REM	✓	✓	✓	✓	✓	✓		
	DIM	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM	✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM	✓	✓	✓	✓	✓	✓		
	DDM	✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM	✓	✓	✓	✓	✓	✓	1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters	
	PHM	✓	✓	✓	✓	✓	✓		
	AUM	✓	✓	✓	✓	✓	✓		
	SWM	✓	✓	✓	✓	✓	✓		
	DEM	✓	✓	✓	✓	✓	✓		
	SAS	✓	✓	✓	✓	✓	✓		
	RTI	✓	✓	✓	✓	✓	✓		
	AEM	✓	✓	✓	✓	✓	✓		
	CPM	✓	✓	✓	✓	✓	✓		
2005	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B5254T2	✓	✓	✓	✓	✓	✓	
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓	✓	✓	✓	
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
		SRS	✓	✓	✓	✓	✓	✓	
		CEM	✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
		UEM	✓	✓	✓	✓	✓	✓	
		REM	✓	✓	✓	✓	✓	✓	
		DIM	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
		PDM	✓	✓	✓	✓	✓	✓	1.Initialize the window
		PSM	✓	✓	✓	✓	✓	✓	
		DDM	✓	✓	✓	✓	✓	✓	1.Initialize the window
		CCM	✓	✓	✓	✓	✓	✓	1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters
	PHM	✓	✓	✓	✓	✓	✓		

	AUM		✓	✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓			
	SAS		✓	✓	✓	✓	✓			
	RTI		✓	✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓	✓		
2006	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓		Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓		
	Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓		Programming the optimizing parameters
		D4164T	✓	✓	✓	✓	✓	✓		
		D4204T	✓	✓	✓	✓	✓	✓		
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓		Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓		1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓		1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓		1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓		
	DDM		✓	✓	✓	✓	✓	✓		1.Initialize the window
	CCM		✓	✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
PHM		✓	✓	✓	✓	✓	✓			
AUM		✓	✓	✓	✓	✓	✓			
DEM		✓	✓	✓	✓	✓	✓			
SAS		✓	✓	✓	✓	✓	✓			
RTI		✓	✓	✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓	✓		
2006	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓		Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓		
	Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓		Programming the optimizing parameters
		D4164T	✓	✓	✓	✓	✓	✓		
D4204T		✓	✓	✓	✓	✓	✓			
	AW55-50/51SN	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	

2007	TCM	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM		✓	✓	✓	✓	✓	✓		
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓	✓		
	AUM		✓	✓	✓	✓	✓	✓		
	DEM		✓	✓	✓	✓	✓	✓		
SAS		✓	✓	✓	✓	✓	✓			
RTI		✓	✓	✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓			
CPM		✓	✓	✓	✓	✓	✓			
1997	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM		✓	✓	✓	✓	✓	✓		
	TCM		✓	✓	✓	✓	✓	✓		
	ABS		✓	✓	✓	✓	✓	✓		
	SRS		✓	✓	✓	✓	✓	✓		
	IC		✓						Oil lamp reset	
	Immobilizer		✓	✓	✓	✓	✓	✓		
	VGLA		✓	✓	✓	✓	✓	✓		
	PSL		✓	✓	✓	✓	✓	✓		
	PSR		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓	✓		
	RTI		✓	✓	✓	✓	✓	✓		
	1998	General Service								Resetting the SRL(Service Reminder Lamp)to zero
		ECM		✓	✓	✓	✓	✓	✓	
		TCM		✓	✓	✓	✓	✓	✓	
ABS			✓	✓	✓	✓	✓	✓		
SRS			✓	✓	✓	✓	✓	✓		
IC			✓						Oil lamp reset	
Immobilizer			✓	✓	✓	✓	✓	✓		
VGLA			✓	✓	✓	✓	✓	✓		
PSL			✓	✓	✓	✓	✓	✓		
PSR			✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓			
RTI		✓	✓	✓	✓	✓	✓			
General Service								Resetting the SRL(Service Reminder Lamp)to zero		

S70

1999	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
B5234T7	✓	✓	✓		✓	✓			
1999	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	SRS	✓	✓	✓		✓			
	ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	Immobilizer	✓	✓	✓		✓	✓		
	VGLA	✓	✓	✓		✓	✓		
	CI	✓	✓	✓		✓	✓		
	PSL	✓	✓	✓		✓	✓		
	PSR	✓	✓	✓		✓	✓		
	CPM	✓	✓	✓		✓	✓		
	CCM	✓	✓	✓		✓	✓		
	RTI	✓	✓	✓		✓	✓		
	General Service							Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
B5234T7	✓	✓	✓		✓	✓			
	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	

2000	TCM	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	SRS	✓	✓	✓		✓			
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	Immobilizer	✓	✓	✓		✓	✓		
	VGLA	✓	✓	✓		✓	✓		
	CI	✓	✓	✓		✓	✓		
	PSL	✓	✓	✓		✓	✓		
	PSR	✓	✓	✓		✓	✓		
	CPM	✓	✓	✓		✓	✓		
	CCM	✓	✓	✓		✓	✓		
RTI	✓	✓	✓		✓	✓			
1999	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS	✓	✓	✓	✓	✓	✓	✓		
CEM	✓	✓	✓	✓	✓	✓	✓	Reading alarm cause	
UEM	✓	✓	✓	✓	✓	✓	✓		
REM	✓	✓	✓	✓	✓	✓	✓		

	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓			
	AUM		✓	✓	✓	✓	✓			
	SWM		✓	✓	✓	✓	✓			
	RTI		✓	✓	✓	✓				
	AEM		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓					
2001	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
	ECM	B5244S	✓	✓	✓		✓	✓		
		B6304S3	✓	✓	✓		✓	✓		
		B6294T	✓	✓	✓		✓	✓		
		B6284T	✓	✓	✓		✓	✓		
		B5204T4	✓	✓	✓		✓	✓		
		B5204T3	✓	✓	✓		✓	✓		
		B5244SG	✓	✓	✓		✓	✓		
		B6294S2	✓	✓	✓		✓	✓		
		B5244S2	✓	✓	✓		✓	✓		
		B5254T2	✓	✓	✓		✓	✓		
		B5234T3	✓	✓	✓		✓	✓		
	B5204T5	✓	✓	✓		✓	✓			
	B5254T4	✓	✓	✓		✓	✓			
	B5234T7	✓	✓	✓		✓	✓			
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters	
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV	✓	✓	✓	✓	✓	✓		
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓			
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause	
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module		
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window		
PSM		✓	✓	✓	✓	✓	✓			
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window		
CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters		
PHM		✓	✓	✓	✓	✓				
AUM		✓	✓	✓	✓	✓				
SWM		✓	✓	✓	✓	✓				

	RTI		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
2002	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	Adaptation of the throttle unit
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
PSM		✓	✓	✓	✓	✓	✓		
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters	
PHM		✓	✓	✓	✓	✓			
AUM		✓	✓	✓	✓	✓			
SWM		✓	✓	✓	✓	✓			
DEM		✓	✓	✓	✓	✓			
RTI		✓	✓	✓	✓				
AEM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓				

2003	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	Adaptation of the throttle unit
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓	
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
PHM		✓	✓	✓	✓	✓	✓		
AUM		✓	✓	✓	✓	✓	✓		
SWM		✓	✓	✓	✓	✓	✓		
DEM		✓	✓	✓	✓	✓	✓		
RTI		✓	✓	✓	✓	✓	✓		
AEM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓		
	General Service							1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
	B5244S	✓	✓	✓		✓	✓		

2004	ECM	B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
		B5234T7	✓	✓	✓		✓	✓	
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters	
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV	✓	✓	✓	✓	✓	✓		
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
SRS		✓	✓	✓	✓	✓	✓		
CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause	
UEM		✓	✓	✓	✓	✓	✓		
REM		✓	✓	✓	✓	✓	✓		
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
PSM		✓	✓	✓	✓	✓	✓		
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adammer motor end stops 2.Reading-out programmed parameters	
PHM		✓	✓	✓	✓	✓	✓		
AUM		✓	✓	✓	✓	✓	✓		
SWM		✓	✓	✓	✓	✓	✓		
DEM		✓	✓	✓	✓	✓	✓		
RTI		✓	✓	✓	✓	✓	✓		
AEM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓		
General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
D4164T		✓	✓	✓					

2005	TCM	D4204T	✓	✓	✓	✓	✓	✓	
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓	
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamer motor end stops 2.Reading-out programmed parameters
	PHM		✓	✓	✓	✓	✓		
	AUM		✓	✓	✓	✓	✓		
	DEM		✓	✓	✓	✓	✓		
RTI		✓	✓	✓	✓				
AEM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓					
2006	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
PSM		✓	✓	✓	✓	✓	✓		

		DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
		CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters	
		PHM		✓	✓	✓	✓	✓			
		AUM		✓	✓	✓	✓	✓			
		DEM		✓	✓	✓	✓	✓			
		RTI		✓	✓	✓	✓				
		AEM		✓	✓	✓	✓		✓		
		CPM		✓	✓	✓					
		ECM		✓	✓	✓		✓			
		TCM		✓	✓	✓		✓			
		SRS		✓	✓	✓		✓			
		IC		✓						Oil lamp reset	
		ABS		✓	✓	✓		✓	✓		
		Immobilizer		✓	✓	✓		✓			
		PSL		✓	✓	✓		✓			
		PSR		✓	✓	✓		✓			
		RTI		✓	✓	✓		✓	✓		
		ECM		✓	✓	✓		✓			
		TCM		✓	✓	✓		✓			
		SRS		✓	✓	✓		✓			
		IC		✓						Oil lamp reset	
		ABS		✓	✓	✓		✓	✓		
		Immobilizer		✓	✓	✓		✓			
		PSL		✓	✓	✓		✓			
		PSR		✓	✓	✓		✓			
		RTI		✓	✓	✓		✓	✓		
		General Service								Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	D5252T MSA 15.7	✓	✓	✓		✓			
		TCM	AW50-42	✓	✓	✓		✓			
		ABS		✓	✓	✓		✓			
		SRS		✓	✓	✓		✓			
		Combi		✓	✓	✓		✓		Oil lamp reset	
		Immobilizer		✓	✓	✓		✓			
		VGLA		✓	✓	✓					
		PSL		✓	✓	✓		✓			
		PSR		✓	✓	✓		✓			
		CPM		✓	✓	✓		✓	✓		
		RTI		✓	✓	✓		✓	✓		
		General Service								Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	D5252T MSA 15.7	✓	✓	✓		✓			
		TCM	AW50-42	✓	✓	✓		✓			
		ABS		✓	✓	✓		✓			
		SRS		✓	✓	✓		✓			
		Combi		✓	✓	✓		✓		Oil lamp reset	
		Immobilizer		✓	✓	✓		✓			
		VGLA		✓	✓	✓					
		PSL		✓	✓	✓		✓			
		PSR		✓	✓	✓		✓			
		CPM		✓	✓	✓		✓	✓		
		RTI		✓	✓	✓		✓	✓		

V70(-00)

1999	General Service								Resetting the SRL(Service Reminder Lamp)to zero		
	ECM	B5244S	✓	✓	✓		✓	✓			
		B6304S3	✓	✓	✓		✓	✓			
		B6294T	✓	✓	✓		✓	✓			
		B6284T	✓	✓	✓		✓	✓			
		B5204T4	✓	✓	✓		✓	✓			
		B5204T3	✓	✓	✓		✓	✓			
		B5244SG	✓	✓	✓		✓	✓			
		B6294S2	✓	✓	✓		✓	✓			
		B5244S2	✓	✓	✓		✓	✓			
		B5254T2	✓	✓	✓		✓	✓			
		B5234T3	✓	✓	✓		✓	✓			
		B5204T5	✓	✓	✓		✓	✓			
	B5254T4	✓	✓	✓		✓	✓				
	B5234T7	✓	✓	✓		✓	✓				
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
		4T65EV	✓	✓	✓	✓	✓	✓			
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change			
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment		
	SRS	✓	✓	✓	✓	✓	✓	✓			
	Immobilizer	✓	✓	✓	✓	✓	✓	✓			
	VGLA	✓	✓	✓	✓	✓	✓	✓			
	CI	✓	✓	✓	✓	✓	✓	✓			
	PSL	✓	✓	✓	✓	✓	✓	✓			
PSR	✓	✓	✓	✓	✓	✓	✓				
CPM	✓	✓	✓	✓	✓	✓	✓				
CCM	✓	✓	✓	✓	✓	✓	✓				
RTI	✓	✓	✓	✓	✓	✓	✓				
1999	General Service								Resetting the SRL(Service Reminder Lamp)to zero		
	ECM	B5244S	✓	✓	✓		✓	✓			
		B6304S3	✓	✓	✓		✓	✓			
		B6294T	✓	✓	✓		✓	✓			
		B6284T	✓	✓	✓		✓	✓			
		B5204T4	✓	✓	✓		✓	✓			
		B5204T3	✓	✓	✓		✓	✓			
		B5244SG	✓	✓	✓		✓	✓			
		B6294S2	✓	✓	✓		✓	✓			
		B5244S2	✓	✓	✓		✓	✓			
		B5254T2	✓	✓	✓		✓	✓			
		B5234T3	✓	✓	✓		✓	✓			
		B5204T5	✓	✓	✓		✓	✓			
	B5254T4	✓	✓	✓		✓	✓				
	B5234T7	✓	✓	✓		✓	✓				

2000	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS	✓	✓	✓	✓	✓	✓	✓	
	Immobilizer	✓	✓	✓	✓	✓	✓	✓	
	VGLA	✓	✓	✓	✓	✓	✓	✓	
	CI	✓	✓	✓	✓	✓	✓	✓	
	PSL	✓	✓	✓	✓	✓	✓	✓	
	PSR	✓	✓	✓	✓	✓	✓	✓	
	CPM	✓	✓	✓	✓	✓	✓	✓	
CCM	✓	✓	✓	✓	✓	✓	✓		
RTI	✓	✓	✓	✓	✓	✓	✓		
2000	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
	B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
4T65EV		✓	✓	✓	✓	✓	✓		
4T65AWD		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
SRS	✓	✓	✓	✓	✓	✓	✓		
CEM	✓	✓	✓	✓	✓	✓	✓	Reading alarm cause	
UEM	✓	✓	✓	✓	✓	✓	✓		
REM	✓	✓	✓	✓	✓	✓	✓		

			✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓		
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM		✓	✓	✓	✓	✓	✓		
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓	✓		
	AUM		✓	✓	✓	✓	✓	✓		
	SWM		✓	✓	✓	✓	✓	✓		
	SAS		✓	✓	✓	✓	✓	✓		
	RTI		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓	✓		
2001	ECM	B5244S	✓	✓	✓	✓	✓	✓		
		B6304S3	✓	✓	✓	✓	✓	✓		
		B6294T	✓	✓	✓	✓	✓	✓		
		B6284T	✓	✓	✓	✓	✓	✓		
		B5204T4	✓	✓	✓	✓	✓	✓		
		B5204T3	✓	✓	✓	✓	✓	✓		
		B5244SG	✓	✓	✓	✓	✓	✓		
		B6294S2	✓	✓	✓	✓	✓	✓		
		B5244S2	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓		
		B5234T3	✓	✓	✓	✓	✓	✓		
		B5204T5	✓	✓	✓	✓	✓	✓		
	B5254T4	✓	✓	✓	✓	✓	✓			
	B5234T7	✓	✓	✓	✓	✓	✓			
	Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓	Programming the optimizing parameters	
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM		✓	✓	✓	✓	✓	✓	✓	
REM		✓	✓	✓	✓	✓	✓	✓		
DIM		✓	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
PDM		✓	✓	✓	✓	✓	✓	✓	1.Initialize the window	
PSM		✓	✓	✓	✓	✓	✓	✓		
DDM		✓	✓	✓	✓	✓	✓	✓	1.Initialize the window	
CCM		✓	✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
PHM		✓	✓	✓	✓	✓	✓	✓		
AUM		✓	✓	✓	✓	✓	✓	✓		

	SWM		✓	✓	✓	✓	✓		
	SAS		✓	✓	✓		✓		
	RTI		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
2002	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
	B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
PSM		✓	✓	✓	✓	✓	✓		
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
PHM		✓	✓	✓	✓	✓	✓		
AUM		✓	✓	✓	✓	✓	✓		
SWM		✓	✓	✓	✓	✓	✓		
SAS		✓	✓	✓	✓	✓	✓		
RTI		✓	✓	✓	✓	✓	✓		
AEM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓		

V70(00-)

2003	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓		
		B6304S3	✓	✓	✓		✓	✓		
		B6294T	✓	✓	✓		✓	✓		
		B6284T	✓	✓	✓		✓	✓		
		B5204T4	✓	✓	✓		✓	✓		
		B5204T3	✓	✓	✓		✓	✓		
		B5244SG	✓	✓	✓		✓	✓		
		B6294S2	✓	✓	✓		✓	✓		
		B5244S2	✓	✓	✓		✓	✓		
		B5254T2	✓	✓	✓		✓	✓		
		B5234T3	✓	✓	✓		✓	✓		
		B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓			
	B5234T7	✓	✓	✓		✓	✓			
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters	
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV	✓	✓	✓	✓	✓	✓		
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause	
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM		✓	✓	✓	✓	✓	✓		
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓	✓		
AUM		✓	✓	✓	✓	✓	✓			
SWM		✓	✓	✓	✓	✓	✓			
DEM		✓	✓	✓	✓	✓	✓			
SAS		✓	✓	✓	✓	✓	✓			
RTI		✓	✓	✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓			
CPM		✓	✓	✓	✓	✓	✓			
General Service								Resetting the SRL(Service Reminder Lamp)to zero		
	B5244S	✓	✓	✓		✓	✓			
	B6304S3	✓	✓	✓		✓	✓			

ECM	B6294T	✓	✓	✓		✓	✓	
	B6284T	✓	✓	✓		✓	✓	
	B5204T4	✓	✓	✓		✓	✓	
	B5204T3	✓	✓	✓		✓	✓	
	B5244SG	✓	✓	✓		✓	✓	
	B6294S2	✓	✓	✓		✓	✓	
	B5244S2	✓	✓	✓		✓	✓	
	B5254T2	✓	✓	✓		✓	✓	
	B5234T3	✓	✓	✓		✓	✓	
	B5204T5	✓	✓	✓		✓	✓	
B5254T4	✓	✓	✓		✓	✓		
B5234T7	✓	✓	✓		✓	✓		
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV	✓	✓	✓	✓	✓	✓	
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS		✓	✓	✓	✓	✓	✓	
CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
UEM		✓	✓	✓	✓	✓	✓	
REM		✓	✓	✓	✓	✓	✓	
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
PSM		✓	✓	✓	✓	✓	✓	
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
PHM		✓	✓	✓	✓	✓	✓	
AUM		✓	✓	✓	✓	✓	✓	
SWM		✓	✓	✓	✓	✓	✓	
DEM		✓	✓	✓	✓	✓	✓	
SAS		✓	✓	✓	✓	✓	✓	
RTI		✓	✓	✓	✓	✓	✓	
AEM		✓	✓	✓	✓	✓	✓	
CPM		✓	✓	✓	✓	✓	✓	
General Service								Resetting the SRL(Service Reminder Lamp)to zero
ECM	B5244S4	✓	✓	✓	✓	✓	✓	
	B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
	B4184S11	✓	✓	✓	✓	✓	✓	
Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓	Programming the optimizing parameters
	D4164T	✓	✓	✓	✓	✓	✓	
	D4204T	✓	✓	✓	✓	✓	✓	

			✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓			
	AUM		✓	✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓			
	SAS		✓	✓	✓	✓	✓			
	RTI		✓	✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓			
	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S4	✓	✓	✓		✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit	
		B4184S11	✓	✓	✓	✓	✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters	
		D4164T	✓	✓	✓					
		D4204T	✓	✓	✓	✓	✓	✓		
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM		✓	✓	✓	✓	✓	✓		
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓	✓		
	AUM		✓	✓	✓	✓	✓	✓		
	DEM		✓	✓	✓	✓	✓	✓		
	SAS		✓	✓	✓	✓	✓	✓		
	RTI		✓	✓	✓	✓	✓	✓		
	AEM		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓	✓		
	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	Fenix5.1	✓	✓	✓		✓	✓		
	TCM	AW50-42	✓	✓	✓		✓	✓		
	ABS		✓	✓	✓		✓	✓		
	SRS		✓	✓	✓		✓	✓		
	IC		✓	✓	✓		✓	✓		
	Immobilizer		✓	✓	✓		✓	✓		
	VGLA		✓	✓	✓		✓	✓		

		CPM		✓	✓	✓		✓	✓		
		DSA		✓	✓	✓		✓	✓		
		CCM		✓	✓	✓		✓	✓		
		RTI		✓	✓	✓		✓	✓		
1997		General Service								Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	Fenix5.1	✓	✓	✓		✓	✓		
		TCM	AW50-42	✓	✓	✓		✓			
		ABS		✓	✓	✓		✓	✓		
		SRS		✓	✓	✓		✓			
		IC		✓	✓	✓		✓	✓		
		Immobilizer		✓	✓	✓		✓	✓		
		VGLA		✓	✓	✓		✓	✓		
		CPM		✓	✓	✓		✓	✓		
		DSA		✓	✓	✓		✓	✓		
		CCM		✓	✓	✓		✓	✓		
		RTI		✓	✓	✓		✓	✓		
1998		General Service								Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	Fenix5.1	✓	✓	✓		✓	✓		
		TCM	AW50-42	✓	✓	✓		✓			
		ABS		✓	✓	✓		✓	✓		
		SRS		✓	✓	✓		✓			
		IC		✓	✓	✓		✓	✓		
		Immobilizer		✓	✓	✓		✓	✓		
		VGLA		✓	✓	✓		✓	✓		
		CPM		✓	✓	✓		✓	✓		
		DSA		✓	✓	✓		✓	✓		
		CCM		✓	✓	✓		✓	✓		
		RTI		✓	✓	✓		✓	✓		
1999		General Service								Resetting the SRL(Service Reminder Lamp)to zero	
		ECM	B4204S2	✓	✓	✓		✓	✓		
			B4184SJ	✓	✓	✓		✓	✓		
			B5254S	✓	✓	✓		✓	✓		
			B5244S	✓	✓	✓		✓	✓		
		TCM	AW50-42	✓	✓	✓		✓	✓		
		ABS		✓	✓	✓		✓			
		SRS		✓	✓	✓		✓			
		Immobilizer		✓	✓	✓		✓	✓		
		VGLA		✓	✓	✓		✓	✓		
		CEM		✓	✓	✓		✓	✓		
		DIM		✓	✓	✓		✓	✓		
		CCM		✓	✓	✓		✓	✓		
	CPM		✓	✓	✓		✓	✓			
	DSA		✓	✓	✓		✓	✓			
	General Service									Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B4204S2	✓	✓	✓		✓	✓			
		B4184SJ	✓	✓	✓		✓	✓			
		B5254S	✓	✓	✓		✓	✓			
		B5244S	✓	✓	✓		✓	✓			
	TCM	AW50-42	✓	✓	✓		✓	✓			

V40

2000	ABS		✓	✓	✓		✓		
	SRS		✓	✓	✓		✓		
	Immobilizer		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	CPM		✓	✓	✓		✓	✓	
DSA		✓	✓	✓		✓	✓		
2001	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓		
	SRS		✓	✓	✓		✓		
	Immobilizer		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	CPM		✓	✓	✓		✓	✓	
DSA		✓	✓	✓		✓	✓		
2002	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓		
	SRS		✓	✓	✓		✓		
	Immobilizer		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	CEM		✓	✓	✓		✓	✓	
	DIM		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓	✓	
	CPM		✓	✓	✓		✓	✓	
DSA		✓	✓	✓		✓	✓		
2003	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B4204S2	✓	✓	✓		✓	✓	
		B4184SJ	✓	✓	✓		✓	✓	
		B5254S	✓	✓	✓		✓	✓	
		B5244S	✓	✓	✓		✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓		
	SRS		✓	✓	✓		✓		
	Immobilizer		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
CEM		✓	✓	✓		✓	✓		

		DIM		✓	✓	✓		✓	✓			
		CCM		✓	✓	✓		✓	✓			
		CPM		✓	✓	✓		✓	✓			
		DSA		✓	✓	✓		✓	✓			
	2004	General Service								Resetting the SRL(Service Reminder Lamp)to zero		
		ECM	B4204S2	✓	✓	✓		✓	✓			
			B4184SJ	✓	✓	✓		✓	✓			
			B5254S	✓	✓	✓		✓	✓			
			B5244S	✓	✓	✓		✓	✓			
		TCM	AW55-50/51SN	✓	✓	✓		✓	✓			
		ABS		✓	✓	✓		✓				
		SRS		✓	✓	✓		✓				
		Immobilizer		✓	✓	✓		✓	✓			
		VGLA		✓	✓	✓		✓	✓			
		CEM		✓	✓	✓		✓	✓			
		DIM		✓	✓	✓		✓	✓			
		CCM		✓	✓	✓		✓	✓			
	CPM		✓	✓	✓		✓	✓				
	DSA		✓	✓	✓		✓	✓				
	1992	General Service								Resetting the SRL(Service Reminder Lamp)to zero		
		ECM	Motronic 4.3	✓	✓	✓		✓	✓		Reset Adaption	
			Fenix 5.2	✓	✓	✓		✓	✓			
			Motronic 4.4	✓	✓	✓		✓	✓		Reset Adaption	
		TCM	AW50-42	✓	✓	✓		✓	✓			
		ABS		✓	✓	✓		✓	✓			
		SRS		✓	✓	✓		✓				
		IC		✓	✓	✓		✓	✓		Oil lamp reset	
		Immobilizer		✓	✓	✓		✓				
		PSL		✓	✓	✓		✓				
	PSR		✓	✓	✓		✓					
	1993	General Service								Resetting the SRL(Service Reminder Lamp)to zero		
		ECM	Motronic 4.3	✓	✓	✓		✓	✓		Reset Adaption	
			Fenix 5.2	✓	✓	✓		✓	✓			
			Motronic 4.4	✓	✓	✓		✓	✓		Reset Adaption	
		TCM	AW50-42	✓	✓	✓		✓	✓			
		ABS		✓	✓	✓		✓	✓			
		SRS		✓	✓	✓		✓				
		IC		✓	✓	✓		✓	✓		Oil lamp reset	
		Immobilizer		✓	✓	✓		✓				
	PSL		✓	✓	✓		✓					
	PSR		✓	✓	✓		✓					
	1994	General Service								Resetting the SRL(Service Reminder Lamp)to zero		
		ECM	Motronic 4.3	✓	✓	✓		✓	✓		Reset Adaption	
			Fenix 5.2	✓	✓	✓		✓	✓			
			Motronic 4.4	✓	✓	✓		✓	✓		Reset Adaption	
		TCM	AW50-42	✓	✓	✓		✓	✓			
		ABS		✓	✓	✓		✓	✓			
	SRS		✓	✓	✓		✓					
	IC		✓	✓	✓		✓	✓		Oil lamp reset		

850

	Immobilizer		✓	✓	✓		✓		
	PSL		✓	✓	✓		✓		
	PSR		✓	✓	✓		✓		
1995	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	Motronic 4.3	✓	✓	✓		✓	✓	Reset Adaption
		Fenix 5.2	✓	✓	✓		✓	✓	
		Motronic 4.4	✓	✓	✓		✓	✓	Reset Adaption
	TCM	AW50-42	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓		
	IC		✓	✓	✓		✓	✓	Oil lamp reset
	Immobilizer		✓	✓	✓		✓		
	PSL		✓	✓	✓		✓		
PSR		✓	✓	✓		✓			
1996	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	Motronic 4.3	✓	✓	✓		✓	✓	Reset Adaption
		Fenix 5.2	✓	✓	✓		✓	✓	
		Motronic 4.4	✓	✓	✓		✓	✓	Reset Adaption
	TCM	AW50-42	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓		
	IC		✓	✓	✓		✓	✓	Oil lamp reset
	Immobilizer		✓	✓	✓		✓		
	PSL		✓	✓	✓		✓		
PSR		✓	✓	✓		✓			
1997	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	Motronic 4.3	✓	✓	✓		✓	✓	Reset Adaption
		Fenix 5.2	✓	✓	✓		✓	✓	
		Motronic 4.4	✓	✓	✓		✓	✓	Reset Adaption
	TCM	AW50-42	✓	✓	✓		✓	✓	
	ABS		✓	✓	✓		✓	✓	
	SRS		✓	✓	✓		✓		
	IC		✓	✓	✓		✓	✓	Oil lamp reset
	Immobilizer		✓	✓	✓		✓		
	PSL		✓	✓	✓		✓		
PSR		✓	✓	✓		✓			
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	Adaptation of the throttle unit
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	

2003		B5254T4	✓	✓	✓		✓	✓	
		B5234T7	✓	✓	✓		✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓	
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	PHM		✓	✓	✓	✓	✓		
	SWM		✓	✓	✓	✓	✓		
	AUD		✓	✓	✓	✓			
	MP2		✓	✓	✓	✓	✓	✓	
	ATM		✓	✓	✓		✓		
	DEM		✓	✓	✓		✓		
	ICM		✓	✓	✓	✓	✓	✓	
	SAS		✓	✓	✓		✓		
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
General Service								Resetting the SRL(Service Reminder Lamp)to zero	
ECM	B5244S	✓	✓	✓		✓	✓		
	B6304S3	✓	✓	✓		✓	✓		
	B6294T	✓	✓	✓		✓	✓	Adaptation of the throttle unit	
	B6284T	✓	✓	✓		✓	✓		
	B5204T4	✓	✓	✓		✓	✓		
	B5204T3	✓	✓	✓		✓	✓		
	B5244SG	✓	✓	✓		✓	✓		
	B6294S2	✓	✓	✓		✓	✓		
	B5244S2	✓	✓	✓		✓	✓		
	B5254T2	✓	✓	✓		✓	✓		
	B5234T3	✓	✓	✓		✓	✓		
B5204T5	✓	✓	✓		✓	✓			
B5254T4	✓	✓	✓		✓	✓			

XC90

2004

	B5234T7	✓	✓	✓		✓	✓	
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV	✓	✓	✓	✓	✓	✓	
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS		✓	✓	✓	✓	✓	✓	
CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
UEM		✓	✓	✓	✓	✓	✓	
REM		✓	✓	✓	✓	✓	✓	
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
PSM		✓	✓	✓	✓	✓	✓	
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
CCM		✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
PHM		✓	✓	✓	✓	✓	✓	
SWM		✓	✓	✓	✓	✓	✓	
AUD		✓	✓	✓	✓	✓	✓	
MP2		✓	✓	✓	✓	✓	✓	
ATM		✓	✓	✓	✓	✓	✓	
DEM		✓	✓	✓	✓	✓	✓	
ICM		✓	✓	✓	✓	✓	✓	
SAS		✓	✓	✓	✓	✓	✓	
MMM		✓	✓	✓	✓	✓	✓	
AEM		✓	✓	✓	✓	✓	✓	
CPM		✓	✓	✓	✓	✓	✓	
General Service								Resetting the SRL(Service Reminder Lamp)to zero
ECM	B5244S4	✓	✓	✓	✓	✓	✓	
	B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
	B4184S11	✓	✓	✓	✓	✓	✓	
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	D4164T	✓	✓	✓		✓	✓	
	D4204T	✓	✓	✓	✓	✓	✓	
TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS		✓	✓	✓	✓	✓	✓	

	ATM		✓	✓	✓		✓		
	DEM		✓	✓	✓	✓	✓		
	ICM		✓	✓	✓	✓	✓	✓	
	SAS		✓	✓	✓		✓		
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓	
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	PHM		✓	✓	✓	✓	✓		
	AUD		✓	✓	✓	✓			
	MP2		✓	✓	✓	✓	✓	✓	
	ATM		✓	✓	✓	✓	✓		
	DEM		✓	✓	✓	✓	✓		
	ICM		✓	✓	✓	✓	✓	✓	
	SAS		✓	✓	✓		✓		
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	

2004	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	DDM		✓	✓	✓		✓	✓	1.Initialize the window
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓		✓	✓	1.Initialize the window
	SWM		✓	✓	✓		✓		
	PSM		✓	✓	✓	✓		✓	
	PHM		✓	✓	✓	✓	✓	✓	
	AUD		✓	✓	✓	✓			
	ICM		✓	✓	✓	✓	✓	✓	
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	EPS		✓	✓	✓	✓	✓	✓	
AFM		✓	✓	✓	✓	✓	✓		
MPM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓					
2005	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
DDM		✓	✓	✓		✓	✓	1.Initialize the window	
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
PDM		✓	✓	✓		✓	✓	1.Initialize the window	

S40(04-)

	SWM		✓	✓	✓		✓		
	PSM		✓	✓	✓	✓		✓	
	PHM		✓	✓	✓	✓	✓		
	AUD		✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓		
	ICM		✓	✓	✓	✓	✓	✓	
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	ADM		✓	✓	✓	✓	✓		
	EPS		✓	✓	✓	✓	✓		
	PAM		✓	✓	✓	✓	✓		
	IAM		✓	✓	✓	✓	✓	✓	
	AFM		✓	✓	✓	✓	✓	✓	
	MPM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters
2006	DDM		✓	✓	✓		✓	✓	1.Initialize the window
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓		✓	✓	1.Initialize the window
	SWM		✓	✓	✓		✓		
	PSM		✓	✓	✓	✓		✓	
	PHM		✓	✓	✓	✓	✓	✓	
	AUD		✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓		
	ICM		✓	✓	✓	✓	✓	✓	
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	ADM		✓	✓	✓	✓	✓		
	EPS		✓	✓	✓	✓	✓		
	PAM		✓	✓	✓	✓	✓		
	IAM		✓	✓	✓	✓	✓	✓	
	AFM		✓	✓	✓	✓	✓	✓	

	MPM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
2007	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	DDM		✓	✓	✓		✓	✓	1.Initialize the window
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓		✓	✓	1.Initialize the window
	SWM		✓	✓	✓		✓		
	PSM		✓	✓	✓	✓		✓	
	PHM		✓	✓	✓	✓	✓	✓	
	AUD		✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓		
	ICM		✓	✓	✓	✓	✓	✓	
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	ADM		✓	✓	✓	✓	✓		
EPS		✓	✓	✓	✓	✓			
PAM		✓	✓	✓	✓	✓			
IAM		✓	✓	✓	✓	✓	✓		
AFM		✓	✓	✓	✓	✓	✓		
MPM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓					
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change

2008	TCM	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	SWM		✓	✓	✓	✓	✓	✓	
	PSM		✓	✓	✓	✓	✓	✓	
	PHM		✓	✓	✓	✓	✓	✓	
	AUD		✓	✓	✓	✓	✓	✓	
	DEM		✓	✓	✓	✓	✓	✓	
	ICM		✓	✓	✓	✓	✓	✓	
	MMM		✓	✓	✓	✓	✓	✓	
	AEM		✓	✓	✓	✓	✓	✓	
	ADM		✓	✓	✓	✓	✓	✓	
	EPS		✓	✓	✓	✓	✓	✓	
	PAM		✓	✓	✓	✓	✓	✓	
IAM		✓	✓	✓	✓	✓	✓		
AFM		✓	✓	✓	✓	✓	✓		
MPM		✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓		
1991	ECM	Motronic 4.4	✓	✓	✓	✓	✓	✓	
	TCM	AW30-40/30-43	✓	✓	✓	✓	✓	✓	
	ABS		✓	✓	✓	✓	✓	✓	
	SRS		✓	✓	✓	✓	✓	✓	
	Immobilizer		✓	✓	✓	✓	✓	✓	
	Combi		✓	✓	✓	✓	✓	✓	Oil lamp reset
	PSL		✓	✓	✓	✓	✓	✓	
	PSR		✓	✓	✓	✓	✓	✓	
	ECM	Motronic 4.4	✓	✓	✓	✓	✓	✓	
	TCM	AW30-40/30-43	✓	✓	✓	✓	✓	✓	
1992	ABS		✓	✓	✓	✓	✓	✓	
	SRS		✓	✓	✓	✓	✓	✓	
	Immobilizer		✓	✓	✓	✓	✓	✓	
	Combi		✓	✓	✓	✓	✓	✓	Oil lamp reset
	PSL		✓	✓	✓	✓	✓	✓	
	PSR		✓	✓	✓	✓	✓	✓	
	ECM	Motronic 4.4	✓	✓	✓	✓	✓	✓	
1993	TCM	AW30-40/30-43	✓	✓	✓	✓	✓	✓	
	ABS		✓	✓	✓	✓	✓	✓	
	SRS		✓	✓	✓	✓	✓	✓	
	Immobilizer		✓	✓	✓	✓	✓	✓	
	Combi		✓	✓	✓	✓	✓	✓	Oil lamp reset
	PSL		✓	✓	✓	✓	✓	✓	

960

1994	PSR		✓	✓	✓		✓			
	ECM	Motronic 4.4	✓	✓	✓		✓			
	TCM	AW30-40/30-43	✓	✓	✓		✓			
	ABS		✓	✓	✓		✓	✓		
	SRS		✓	✓	✓		✓			
	Immobilizer		✓	✓	✓		✓			
	Combi		✓	✓	✓		✓	✓	Oil lamp reset	
	PSL		✓	✓	✓		✓			
	PSR		✓	✓	✓		✓			
	ECM	Motronic 4.4	✓	✓	✓		✓			
	TCM	AW30-40/30-43	✓	✓	✓		✓			
	ABS		✓	✓	✓		✓	✓		
1995	SRS		✓	✓	✓		✓			
	Immobilizer		✓	✓	✓		✓			
	Combi		✓	✓	✓		✓	✓	Oil lamp reset	
	PSL		✓	✓	✓		✓			
	PSR		✓	✓	✓		✓			
	ECM	Motronic 4.4	✓	✓	✓		✓			
	TCM	AW30-40/30-43	✓	✓	✓		✓			
	ABS		✓	✓	✓		✓	✓		
	SRS		✓	✓	✓		✓			
	Immobilizer		✓	✓	✓		✓			
	Combi		✓	✓	✓		✓	✓	Oil lamp reset	
	PSL		✓	✓	✓		✓			
1996	PSR		✓	✓	✓		✓			
	ECM	Motronic 4.4	✓	✓	✓		✓			
	TCM	AW30-40/30-43	✓	✓	✓		✓			
	ABS		✓	✓	✓		✓	✓		
	SRS		✓	✓	✓		✓			
	Immobilizer		✓	✓	✓		✓			
	Combi		✓	✓	✓		✓	✓	Oil lamp reset	
	PSL		✓	✓	✓		✓			
	PSR		✓	✓	✓		✓			
	ECM	Motronic 4.4	✓	✓	✓		✓			
	TCM	AW30-40/30-43	✓	✓	✓		✓			
	1997	ABS		✓	✓	✓		✓	✓	
SRS			✓	✓	✓		✓			
Immobilizer			✓	✓	✓		✓			
Combi			✓	✓	✓		✓	✓	Oil lamp reset	
PSL			✓	✓	✓		✓			
PSR			✓	✓	✓		✓			
ECM		Motronic 4.4	✓	✓	✓		✓			
TCM		AW30-40/30-43	✓	✓	✓		✓			
General Service									Resetting the SRL(Service Reminder Lamp)to zero	
1999		B5244S		✓	✓	✓		✓	✓	
		B6304S3		✓	✓	✓		✓	✓	
		B6294T		✓	✓	✓		✓	✓	
	B6284T		✓	✓	✓		✓	✓		
	B5204T4		✓	✓	✓		✓	✓		
	B5204T3		✓	✓	✓		✓	✓		
	B5244SG		✓	✓	✓		✓	✓		
	B6294S2		✓	✓	✓		✓	✓		
	B5244S2		✓	✓	✓		✓	✓		
	B5254T2		✓	✓	✓		✓	✓		
	B5234T3		✓	✓	✓		✓	✓		
	B5204T5		✓	✓	✓		✓	✓		
B5254T4		✓	✓	✓		✓	✓			
B5234T7		✓	✓	✓		✓	✓			
AW55-50SN		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
4T65EV-GT		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		

2000	TCM	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV	✓	✓	✓	✓	✓	✓		
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓	✓		
	Immobilizer		✓	✓	✓	✓	✓	✓		
	VGLA		✓	✓	✓	✓	✓	✓		
	CI		✓	✓	✓	✓	✓	✓		
	CCM		✓	✓	✓	✓	✓	✓		
	PSL		✓	✓	✓	✓	✓	✓		
	PSR		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓	✓		
	RTI		✓	✓	✓	✓	✓	✓		
	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓	✓	✓	✓	✓	
		B6304S3	✓	✓	✓	✓	✓	✓	✓	
		B6294T	✓	✓	✓	✓	✓	✓	✓	
		B6284T	✓	✓	✓	✓	✓	✓	✓	
		B5204T4	✓	✓	✓	✓	✓	✓	✓	
B5204T3		✓	✓	✓	✓	✓	✓	✓		
B5244SG		✓	✓	✓	✓	✓	✓	✓		
B6294S2		✓	✓	✓	✓	✓	✓	✓		
B5244S2		✓	✓	✓	✓	✓	✓	✓		
B5254T2		✓	✓	✓	✓	✓	✓	✓		
B5234T3		✓	✓	✓	✓	✓	✓	✓		
B5204T5		✓	✓	✓	✓	✓	✓	✓		
B5254T4	✓	✓	✓	✓	✓	✓	✓			
B5234T7	✓	✓	✓	✓	✓	✓	✓			
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV-GT	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50-42	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50/51AWD	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV	✓	✓	✓	✓	✓	✓	✓		
	4T65AWD	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment		
SRS		✓	✓	✓	✓	✓	✓			
Immobilizer		✓	✓	✓	✓	✓	✓			
VGLA		✓	✓	✓	✓	✓	✓			
CI		✓	✓	✓	✓	✓	✓			
CCM		✓	✓	✓	✓	✓	✓			
PSL		✓	✓	✓	✓	✓	✓			
PSR		✓	✓	✓	✓	✓	✓			
CPM		✓	✓	✓	✓	✓	✓			

C70 Coupe

2001	RTI		✓	✓	✓		✓	✓		
	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓		
		B6304S3	✓	✓	✓		✓	✓		
		B6294T	✓	✓	✓		✓	✓		
		B6284T	✓	✓	✓		✓	✓		
		B5204T4	✓	✓	✓		✓	✓		
		B5204T3	✓	✓	✓		✓	✓		
		B5244SG	✓	✓	✓		✓	✓		
		B6294S2	✓	✓	✓		✓	✓		
		B5244S2	✓	✓	✓		✓	✓		
		B5254T2	✓	✓	✓		✓	✓		
		B5234T3	✓	✓	✓		✓	✓		
		B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓			
	B5234T7	✓	✓	✓		✓	✓			
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65EV	✓	✓	✓	✓	✓	✓		
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓		✓			
	Immobilizer		✓	✓	✓		✓	✓		
VGLA		✓	✓	✓		✓	✓			
CI		✓	✓	✓		✓	✓			
CCM		✓	✓	✓		✓				
PSL		✓	✓	✓		✓	✓			
PSR		✓	✓	✓		✓	✓			
CPM		✓	✓	✓		✓	✓			
RTI		✓	✓	✓		✓	✓			
2001	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓		
		B6304S3	✓	✓	✓		✓	✓		
		B6294T	✓	✓	✓		✓	✓		
		B6284T	✓	✓	✓		✓	✓		
		B5204T4	✓	✓	✓		✓	✓		
		B5204T3	✓	✓	✓		✓	✓		
		B5244SG	✓	✓	✓		✓	✓		
		B6294S2	✓	✓	✓		✓	✓		
		B5244S2	✓	✓	✓		✓	✓		
		B5254T2	✓	✓	✓		✓	✓		
		B5234T3	✓	✓	✓		✓	✓		
		B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓			

2002		B5234T7	✓	✓	✓		✓	✓	
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS	✓	✓	✓	✓	✓	✓		
	Immobilizer	✓	✓	✓	✓	✓	✓		
	VGLA	✓	✓	✓	✓	✓	✓		
	CI	✓	✓	✓	✓	✓	✓		
	CCM	✓	✓	✓	✓	✓	✓		
	PSL	✓	✓	✓	✓	✓	✓		
PSR	✓	✓	✓	✓	✓	✓			
CPM	✓	✓	✓	✓	✓	✓			
RTI	✓	✓	✓	✓	✓	✓			
1999	General Service							Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
4T65AWD		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment		
SRS	✓	✓	✓	✓	✓	✓			
Immobilizer	✓	✓	✓	✓	✓	✓			
VGLA	✓	✓	✓	✓	✓	✓			

	CI		✓	✓	✓		✓	✓	
	cab control s / s		✓	✓	✓		✓		
	Rollover protection		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓		
	PSL		✓	✓	✓		✓	✓	
	PSR		✓	✓	✓		✓	✓	
	CPM		✓	✓	✓		✓	✓	
	RTI		✓	✓	✓		✓	✓	
2000	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓		✓		
Immobilizer		✓	✓	✓		✓	✓		
VGLA		✓	✓	✓		✓	✓		
CI		✓	✓	✓		✓	✓		
cab control s / s		✓	✓	✓		✓			
Rollover protection		✓	✓	✓		✓	✓		
CCM		✓	✓	✓		✓			
PSL		✓	✓	✓		✓	✓		
PSR		✓	✓	✓		✓	✓		
CPM		✓	✓	✓		✓	✓		
RTI		✓	✓	✓		✓	✓		
General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	B5244S	✓	✓	✓		✓	✓		
	B6304S3	✓	✓	✓		✓	✓		
	B6294T	✓	✓	✓		✓	✓		
	B6284T	✓	✓	✓		✓	✓		

2001	ECM	B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS	✓	✓	✓		✓			
	Immobilizer	✓	✓	✓		✓		✓	
	VGLA	✓	✓	✓		✓		✓	
	CI	✓	✓	✓		✓		✓	
	cab control s / s		✓	✓	✓		✓		
	Rollover protection		✓	✓	✓		✓	✓	
	CCM	✓	✓	✓		✓			
	PSL	✓	✓	✓		✓		✓	
	PSR	✓	✓	✓		✓		✓	
	CPM	✓	✓	✓		✓		✓	
RTI	✓	✓	✓		✓		✓		
2002	General Service							Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		

2003	TCM	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓		✓		
	Immobilizer		✓	✓	✓		✓	✓	
	VGLA		✓	✓	✓		✓	✓	
	CI		✓	✓	✓		✓	✓	
	cab control s / s		✓	✓	✓		✓		
	Rollover protection		✓	✓	✓		✓	✓	
	CCM		✓	✓	✓		✓		
	PSL		✓	✓	✓		✓	✓	
	PSR		✓	✓	✓		✓	✓	
	CPM		✓	✓	✓		✓	✓	
	RTI		✓	✓	✓		✓	✓	
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
B6284T		✓	✓	✓		✓	✓		
B5204T4		✓	✓	✓		✓	✓		
B5204T3		✓	✓	✓		✓	✓		
B5244SG		✓	✓	✓		✓	✓		
B6294S2		✓	✓	✓		✓	✓		
B5244S2		✓	✓	✓		✓	✓		
B5254T2		✓	✓	✓		✓	✓		
B5234T3		✓	✓	✓		✓	✓		
B5204T5		✓	✓	✓		✓	✓		
B5254T4	✓	✓	✓		✓	✓			
B5234T7	✓	✓	✓		✓	✓			
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV	✓	✓	✓	✓	✓	✓		
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
SRS		✓	✓	✓		✓			
Immobilizer		✓	✓	✓		✓	✓		
VGLA		✓	✓	✓		✓	✓		
CI		✓	✓	✓		✓	✓		
cab control s / s		✓	✓	✓		✓			
Rollover protection		✓	✓	✓		✓	✓		

		CCM	✓	✓	✓		✓		
		PSL	✓	✓	✓		✓	✓	
		PSR	✓	✓	✓		✓	✓	
		CPM	✓	✓	✓		✓	✓	
		RTI	✓	✓	✓		✓	✓	
2004	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
	B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS	✓	✓	✓	✓	✓	✓	✓	
	Immobilizer	✓	✓	✓	✓	✓	✓	✓	
	VGLA	✓	✓	✓	✓	✓	✓	✓	
	CI	✓	✓	✓	✓	✓	✓	✓	
cab control s ✓/s	✓	✓	✓	✓	✓	✓	✓		
Rollover protection	✓	✓	✓	✓	✓	✓	✓		
CCM	✓	✓	✓	✓	✓	✓	✓		
PSL	✓	✓	✓	✓	✓	✓	✓		
PSR	✓	✓	✓	✓	✓	✓	✓		
CPM	✓	✓	✓	✓	✓	✓	✓		
RTI	✓	✓	✓	✓	✓	✓	✓		
General Service								Resetting the SRL(Service Reminder Lamp)to zero	
ECM	B5244S	✓	✓	✓		✓	✓		
	B6304S3	✓	✓	✓		✓	✓		
	B6294T	✓	✓	✓		✓	✓		
	B6284T	✓	✓	✓		✓	✓		
	B5204T4	✓	✓	✓		✓	✓		
	B5204T3	✓	✓	✓		✓	✓		
B5244SG	✓	✓	✓		✓	✓			

2005	ECM	B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS	✓	✓	✓		✓			
	Immobilizer	✓	✓	✓		✓	✓		
	VGLA	✓	✓	✓		✓	✓		
	CI	✓	✓	✓		✓	✓		
	cab control s	✓	✓	✓		✓			
	Rollover protection	✓	✓	✓		✓	✓		
CCM	✓	✓	✓		✓				
PSL	✓	✓	✓		✓	✓			
PSR	✓	✓	✓		✓	✓			
CPM	✓	✓	✓		✓	✓			
RTI	✓	✓	✓		✓	✓			
2004	General Service							Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
	Diesel Eng	B4184S11	✓	✓	✓	✓	✓	✓	
		D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
	TCM	D4204T	✓	✓	✓	✓	✓	✓	
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	TCM	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS	✓	✓	✓	✓	✓			
	CEM	✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
CCM	✓	✓	✓	✓	✓			1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
DDM	✓	✓	✓		✓	✓	1.Initialize the window		

		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM	✓	✓	✓		✓	✓	1.Initialize the window
	SWM	✓	✓	✓		✓		
	PSM	✓	✓	✓	✓		✓	
	PHM	✓	✓	✓	✓	✓	✓	
	AUD	✓	✓	✓	✓			
	ICM	✓	✓	✓	✓	✓	✓	
	MMM	✓	✓	✓	✓			
	AEM	✓	✓	✓	✓	✓	✓	
	EPS	✓	✓	✓	✓	✓		
	AFM	✓	✓	✓	✓	✓	✓	
	MPM	✓	✓	✓	✓	✓	✓	
	CPM	✓	✓	✓				
	General Service							Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓	✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓			
		D4204T	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD						1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS	✓	✓	✓	✓	✓		
	CEM	✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM	✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	DDM	✓	✓	✓		✓	✓	1.Initialize the window
	DIM	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM	✓	✓	✓		✓	✓	1.Initialize the window
	SWM	✓	✓	✓		✓		
	PSM	✓	✓	✓	✓		✓	
	PHM	✓	✓	✓	✓	✓	✓	
	AUD	✓	✓	✓	✓			
	DEM	✓	✓	✓	✓	✓		
	ICM	✓	✓	✓	✓	✓	✓	
	MMM	✓	✓	✓	✓			
	AEM	✓	✓	✓	✓	✓	✓	
	ADM	✓	✓	✓	✓	✓		
	EPS	✓	✓	✓	✓	✓		
	PAM	✓	✓	✓	✓	✓		
	IAM	✓	✓	✓	✓	✓	✓	
	AFM	✓	✓	✓	✓	✓	✓	

2005

V50

	MPM		✓	✓	✓	✓	✓		
	CPM		✓	✓	✓				
	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓	
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	DDM		✓	✓	✓		✓	✓	1.Initialize the window
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓		✓	✓	1.Initialize the window
	SWM		✓	✓	✓		✓		
	PSM		✓	✓	✓	✓		✓	
	PHM		✓	✓	✓	✓	✓	✓	
	AUD		✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓		
	ICM		✓	✓	✓	✓	✓	✓	
	MMM		✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓	
	ADM		✓	✓	✓	✓	✓		
	EPS		✓	✓	✓	✓	✓		
	PAM		✓	✓	✓	✓	✓		
	IAM		✓	✓	✓	✓	✓	✓	
	AFM		✓	✓	✓	✓	✓	✓	
	MPM		✓	✓	✓	✓	✓	✓	
	CPM		✓	✓	✓				
2006	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
		AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change

2007	TCM	4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS	✓	✓	✓	✓	✓	✓	✓		
	CEM	✓	✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
	CCM	✓	✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	DDM	✓	✓	✓	✓	✓	✓	✓	1.Initialize the window	
	DIM	✓	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM	✓	✓	✓	✓	✓	✓	✓	1.Initialize the window	
	SWM	✓	✓	✓	✓	✓	✓	✓		
	PSM	✓	✓	✓	✓	✓	✓	✓		
	PHM	✓	✓	✓	✓	✓	✓	✓		
	AUD	✓	✓	✓	✓	✓	✓	✓		
	DEM	✓	✓	✓	✓	✓	✓	✓		
	ICM	✓	✓	✓	✓	✓	✓	✓		
	MMM	✓	✓	✓	✓	✓	✓	✓		
	AEM	✓	✓	✓	✓	✓	✓	✓		
	ADM	✓	✓	✓	✓	✓	✓	✓		
	EPS	✓	✓	✓	✓	✓	✓	✓		
	PAM	✓	✓	✓	✓	✓	✓	✓		
IAM	✓	✓	✓	✓	✓	✓	✓			
AFM	✓	✓	✓	✓	✓	✓	✓			
MPM	✓	✓	✓	✓	✓	✓	✓			
CPM	✓	✓	✓	✓	✓	✓	✓			
	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓	✓	✓	✓	✓	
		B6304S3	✓	✓	✓	✓	✓	✓	✓	
		B6294T	✓	✓	✓	✓	✓	✓	✓	
		B6284T	✓	✓	✓	✓	✓	✓	✓	
		B5204T4	✓	✓	✓	✓	✓	✓	✓	
		B5204T3	✓	✓	✓	✓	✓	✓	✓	
		B5244SG	✓	✓	✓	✓	✓	✓	✓	
		B6294S2	✓	✓	✓	✓	✓	✓	✓	
		B5244S2	✓	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	✓	
		B5234T3	✓	✓	✓	✓	✓	✓	✓	
	B5204T5	✓	✓	✓	✓	✓	✓	✓		
	B5254T4	✓	✓	✓	✓	✓	✓	✓		
	B5234T7	✓	✓	✓	✓	✓	✓	✓		
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV-GT	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	AW50-42	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	

2001		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		ABS	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
		SRS	✓	✓	✓	✓	✓	✓	
		CEM	✓	✓	✓	✓	✓	✓	Reading alarm cause
		UEM	✓	✓	✓	✓	✓	✓	
		REM	✓	✓	✓	✓	✓	✓	
		DIM	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
		PDM	✓	✓	✓	✓	✓	✓	1.Initialize the window
		PSM	✓	✓	✓	✓	✓	✓	
		DDM	✓	✓	✓	✓	✓	✓	1.Initialize the window
		CCM	✓	✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
		PHM	✓	✓	✓	✓	✓	✓	
		AUM	✓	✓	✓	✓	✓	✓	
		SWM	✓	✓	✓	✓	✓	✓	
		SAS	✓	✓	✓	✓	✓	✓	
	RTI	✓	✓	✓	✓	✓	✓		
	AEM	✓	✓	✓	✓	✓	✓		
	CPM	✓	✓	✓	✓	✓	✓		
2002	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
	B5204T5	✓	✓	✓		✓	✓		
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
AW50-42		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
AW50/51AWD		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
4T65EV		✓	✓	✓	✓	✓	✓		
4T65AWD		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	

	SRS	✓	✓	✓	✓	✓			
	CEM	✓	✓	✓	✓	✓	✓	Reading alarm cause	
	UEM	✓	✓	✓	✓	✓	✓		
	REM	✓	✓	✓	✓	✓	✓		
	DIM	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM	✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM	✓	✓	✓	✓	✓	✓		
	DDM	✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM	✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters	
	PHM	✓	✓	✓	✓	✓			
	AUM	✓	✓	✓	✓	✓			
	SWM	✓	✓	✓	✓	✓			
	SAS	✓	✓	✓	✓	✓			
	RTI	✓	✓	✓	✓	✓			
	AEM	✓	✓	✓	✓	✓	✓		
	CPM	✓	✓	✓					
2003	General Service							Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
		B5204T5	✓	✓	✓		✓	✓	
	B5254T4	✓	✓	✓		✓	✓		
	B5234T7	✓	✓	✓		✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65EV	✓	✓	✓	✓	✓	✓	
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS		✓	✓	✓	✓	✓			
CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause	
UEM		✓	✓	✓	✓	✓	✓		
REM		✓	✓	✓	✓	✓	✓		

V70 XC(01-)/XC70

2004

DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
PSM		✓	✓	✓	✓		✓	
DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters
PHM		✓	✓	✓	✓	✓		
AUM		✓	✓	✓	✓	✓		
SWM		✓	✓	✓	✓	✓		
DEM		✓	✓	✓		✓		
SAS		✓	✓	✓		✓		
RTI		✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓	
CPM		✓	✓	✓				
General Service								Resetting the SRL(Service Reminder Lamp)to zero
ECM	B5244S	✓	✓	✓		✓	✓	
	B6304S3	✓	✓	✓		✓	✓	
	B6294T	✓	✓	✓		✓	✓	
	B6284T	✓	✓	✓		✓	✓	
	B5204T4	✓	✓	✓		✓	✓	
	B5204T3	✓	✓	✓		✓	✓	
	B5244SG	✓	✓	✓		✓	✓	
	B6294S2	✓	✓	✓		✓	✓	
	B5244S2	✓	✓	✓		✓	✓	
	B5254T2	✓	✓	✓		✓	✓	
	B5234T3	✓	✓	✓		✓	✓	
	B5204T5	✓	✓	✓		✓	✓	
B5254T4	✓	✓	✓		✓	✓		
B5234T7	✓	✓	✓		✓	✓		
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
TCM	AW55-50SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV-GT	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50-42	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65EV	✓	✓	✓	✓	✓	✓	
	4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS		✓	✓	✓	✓	✓		
CEM		✓	✓	✓	✓	✓	✓	Reading alarm cause
UEM		✓	✓	✓	✓	✓	✓	
REM		✓	✓	✓	✓	✓	✓	
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window

	PSM		✓	✓	✓	✓		✓		
	DDM		✓	✓	✓	✓		✓	1.Initialize the window	
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adammer motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓			
	AUM		✓	✓	✓	✓	✓			
	SWM		✓	✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓			
	SAS		✓	✓	✓	✓	✓			
	RTI		✓	✓	✓	✓	✓			
	AEM		✓	✓	✓	✓	✓	✓		
	CPM		✓	✓	✓	✓	✓	✓		
2005	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓		Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓		
	Diesel Eng	D5244T	✓	✓	✓	✓	✓	✓		Programming the optimizing parameters
		D4164T	✓	✓	✓	✓	✓	✓		
		D4204T	✓	✓	✓	✓	✓	✓		
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD								1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓		1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓		Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓		1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓		1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓		1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓		
	DDM		✓	✓	✓	✓	✓	✓		1.Initialize the window
	CCM		✓	✓	✓	✓	✓	✓		1.Self-adjustment of adammer motor end stops 2.Reading-out programmed parameters
PHM		✓	✓	✓	✓	✓	✓			
AUM		✓	✓	✓	✓	✓	✓			
DEM		✓	✓	✓	✓	✓	✓			
SAS		✓	✓	✓	✓	✓	✓			
RTI		✓	✓	✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓	✓		
CPM		✓	✓	✓	✓	✓	✓	✓		
2005	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓		Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓		
	D5244T	✓	✓	✓	✓	✓	✓		Programming the optimizing parameters	

2006	Diesel Eng	D4164T	✓	✓	✓					
		D4204T	✓	✓	✓	✓	✓	✓		
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓			
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
	UEM		✓	✓	✓	✓	✓	✓		
	REM		✓	✓	✓	✓	✓	✓		
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module	
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	PSM		✓	✓	✓	✓		✓		
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window	
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adamper motor end stops 2.Reading-out programmed parameters	
	PHM		✓	✓	✓	✓	✓			
	AUM		✓	✓	✓	✓	✓			
	DEM		✓	✓	✓	✓	✓			
	SAS		✓	✓	✓		✓			
	RTI		✓	✓	✓	✓				
AEM		✓	✓	✓	✓	✓	✓			
CPM		✓	✓	✓						
2007	General Service								Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S4	✓	✓	✓	✓	✓	✓		
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit	
		B4184S11	✓	✓	✓	✓	✓	✓		
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters	
		D4164T	✓	✓	✓					
		D4204T	✓	✓	✓	✓	✓	✓		
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
	SRS		✓	✓	✓	✓	✓			
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps	
UEM		✓	✓	✓	✓	✓	✓			
REM		✓	✓	✓	✓	✓	✓			
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module		
PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window		

		PSM		✓	✓	✓	✓	✓	
		DDM		✓	✓	✓	✓	✓	
		CCM		✓	✓	✓	✓	✓	1.Initialize the window
		PHM		✓	✓	✓	✓	✓	1.Self-adjustment of adampner motor end stops
		AUM		✓	✓	✓	✓	✓	2.Reading-out programmed parameters
		DEM		✓	✓	✓	✓	✓	
		SAS		✓	✓	✓	✓	✓	
		RTI		✓	✓	✓	✓	✓	
		AEM		✓	✓	✓	✓	✓	
		CPM		✓	✓	✓			
		General Service							Resetting the SRL(Service Reminder Lamp)to zero
		ECM	D5252T MSA 15.7	✓	✓	✓		✓	
		TCM	AW50-42	✓	✓	✓		✓	
		ABS		✓	✓	✓		✓	
		SRS		✓	✓	✓		✓	
		Combi		✓	✓	✓		✓	Oil lamp reset
		Immobilizer		✓	✓	✓		✓	
		VGLA		✓	✓	✓		✓	
		PSL		✓	✓	✓		✓	
		PSR		✓	✓	✓		✓	
		RTI		✓	✓	✓		✓	
		General Service							Resetting the SRL(Service Reminder Lamp)to zero
		ECM	B5244S	✓	✓	✓		✓	
			B6304S3	✓	✓	✓		✓	
			B6294T	✓	✓	✓		✓	
			B6284T	✓	✓	✓		✓	
			B5204T4	✓	✓	✓		✓	
			B5204T3	✓	✓	✓		✓	
			B5244SG	✓	✓	✓		✓	
			B6294S2	✓	✓	✓		✓	
			B5244S2	✓	✓	✓		✓	
			B5254T2	✓	✓	✓		✓	
			B5234T3	✓	✓	✓		✓	
			B5204T5	✓	✓	✓		✓	
		B5254T4	✓	✓	✓		✓		
		B5234T7	✓	✓	✓		✓		
		TCM	AW55-50SN	✓	✓	✓	✓	✓	1.Reset adaptation to zero
			4T65EV-GT	✓	✓	✓	✓	✓	2.Resetting the counter for – Gearbox oil Change
			AW50-42	✓	✓	✓	✓	✓	1.Reset adaptation to zero
			AW50/51AWD	✓	✓	✓	✓	✓	2.Resetting the counter for – Gearbox oil Change
			4T65EV	✓	✓	✓	✓	✓	
			4T65AWD	✓	✓	✓	✓	✓	1.Reset adaptation to zero
		ABS		✓	✓	✓	✓	✓	2.Resetting the counter for – Gearbox oil Change
		SRS		✓	✓	✓	✓	✓	Checking brake light switch adjustment
		Immobilizer		✓	✓	✓	✓	✓	

V70 XC(-00)

2000	VGLA	✓	✓	✓		✓	✓		
	CI	✓	✓	✓		✓	✓		
	PSL	✓	✓	✓		✓	✓		
	PSR	✓	✓	✓		✓	✓		
	CPM	✓	✓	✓		✓	✓		
	CCM	✓	✓	✓		✓	✓		
	RTI	✓	✓	✓		✓	✓		
	General Service							Resetting the SRL(Service Reminder Lamp)to zero	
	ECM	B5244S	✓	✓	✓		✓	✓	
		B6304S3	✓	✓	✓		✓	✓	
		B6294T	✓	✓	✓		✓	✓	
		B6284T	✓	✓	✓		✓	✓	
		B5204T4	✓	✓	✓		✓	✓	
		B5204T3	✓	✓	✓		✓	✓	
		B5244SG	✓	✓	✓		✓	✓	
		B6294S2	✓	✓	✓		✓	✓	
		B5244S2	✓	✓	✓		✓	✓	
		B5254T2	✓	✓	✓		✓	✓	
		B5234T3	✓	✓	✓		✓	✓	
	TCM	B5204T5	✓	✓	✓		✓	✓	
		B5254T4	✓	✓	✓		✓	✓	
B5234T7		✓	✓	✓		✓	✓		
AW55-50SN		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
4T65EV-GT		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
AW50-42		✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
ABS	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change	
	4T65EV	✓	✓	✓	✓	✓	✓		
4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
SRS	✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment	
Immobilizer	✓	✓	✓		✓	✓			
VGLA	✓	✓	✓		✓	✓			
CI	✓	✓	✓		✓	✓			
PSL	✓	✓	✓		✓	✓			
PSR	✓	✓	✓		✓	✓			
CPM	✓	✓	✓		✓	✓			
CCM	✓	✓	✓		✓	✓			
RTI	✓	✓	✓		✓	✓			
1997	ECM	✓	✓	✓		✓			
	TCM	✓	✓	✓		✓			
	ABS	✓	✓	✓		✓	✓		
	SRS	✓	✓	✓		✓			
	IC	✓						Oil lamp reset	
	Immobilizer	✓	✓	✓		✓			
	PSL	✓	✓	✓		✓			
	PSR	✓	✓	✓		✓			
RTI	✓	✓	✓		✓	✓			

van

v30	1998	ECM		✓	✓	✓		✓			
		TCM		✓	✓	✓		✓			
		ABS		✓	✓	✓		✓	✓		
		SRS		✓	✓	✓		✓			
		IC		✓						Oil lamp reset	
		Immobilizer		✓	✓	✓		✓			
		PSL		✓	✓	✓		✓			
		PSR		✓	✓	✓		✓			
		RTI		✓	✓	✓		✓	✓		
		General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
ECM	B5244S4	✓	✓	✓	✓	✓	✓	✓			
	B5254T2	✓	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit		
	B4184S11	✓	✓	✓	✓	✓	✓	✓			
Diesel Eng	D5244T	✓	✓	✓		✓	✓	✓	Programming the optimizing parameters		
	D4164T	✓	✓	✓							
	D4204T	✓	✓	✓	✓	✓	✓	✓			
TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
	4T65AWD	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
	AW50/51AWD	✓	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change		
ABS		✓	✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment		
SRS		✓	✓	✓	✓	✓	✓				
CEM		✓	✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps		
UEM		✓	✓	✓	✓	✓	✓	✓			
REM		✓	✓	✓	✓	✓	✓	✓			
DIM		✓	✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module		
PDM		✓	✓	✓	✓	✓	✓	✓	1.Initialize the window		
PSM		✓	✓	✓	✓			✓			
DDM		✓	✓	✓	✓	✓	✓	✓	1.Initialize the window		
CCM		✓	✓	✓	✓	✓			1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters		
PHM		✓	✓	✓	✓	✓					
AUM		✓	✓	✓	✓	✓					
DEM		✓	✓	✓	✓	✓					
RTI		✓	✓	✓	✓						
AEM		✓	✓	✓	✓	✓		✓			
CPM		✓	✓	✓							
C30	2007	General Service								1.Resetting the SRL(Service Reminder Lamp)to zero 2.Reading off the DTCs for all systems 3.Erasing the DTCs for all systems	
		ECM	B5244S4	✓	✓	✓	✓	✓	✓	✓	
			B5254T2	✓	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
			B4184S11	✓	✓	✓	✓	✓	✓	✓	
		Diesel Eng	D5244T	✓	✓	✓		✓	✓	✓	Programming the optimizing parameters
			D4164T	✓	✓	✓					
			D4204T	✓	✓	✓	✓	✓	✓	✓	

2008	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	UEM		✓	✓	✓	✓	✓	✓	
	REM		✓	✓	✓	✓	✓	✓	
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	PSM		✓	✓	✓	✓	✓	✓	
	DDM		✓	✓	✓	✓	✓	✓	1.Initialize the window
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	PHM		✓	✓	✓	✓	✓		
	AUM		✓	✓	✓	✓	✓		
	DEM		✓	✓	✓	✓	✓		
	RTI		✓	✓	✓	✓	✓		
	AEM		✓	✓	✓	✓	✓	✓	
CPM		✓	✓	✓					
2006	General Service								Resetting the SRL(Service Reminder Lamp)to zero
	ECM	B5244S4	✓	✓	✓	✓	✓	✓	
		B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
		B4184S11	✓	✓	✓	✓	✓	✓	
	Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
		D4164T	✓	✓	✓				
		D4204T	✓	✓	✓	✓	✓	✓	
	TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
		AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
	SRS		✓	✓	✓	✓	✓		
	CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
	CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adampner motor end stops 2.Reading-out programmed parameters
	DDM		✓	✓	✓		✓	✓	1.Initialize the window
	DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
	PDM		✓	✓	✓		✓	✓	1.Initialize the window
	SWM		✓	✓	✓		✓		
PSM		✓	✓	✓	✓	✓	✓		

C70(06-)

2007

PSL		✓	✓	✓				
PHM		✓	✓	✓	✓	✓	✓	
AUD		✓	✓	✓	✓			
DEM		✓	✓	✓	✓	✓		
ICM		✓	✓	✓	✓	✓	✓	
MMM		✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓	
ADM		✓	✓	✓	✓	✓		
EPS		✓	✓	✓	✓	✓		
PAM		✓	✓	✓	✓	✓		
IAM		✓	✓	✓	✓	✓	✓	
AFM		✓	✓	✓	✓	✓	✓	
MPM		✓	✓	✓	✓	✓	✓	
CPM		✓	✓	✓				
CRM		✓	✓	✓				
GPS		✓	✓	✓				
SUB		✓	✓	✓				
TMC		✓	✓	✓				
General Service								Resetting the SRL(Service Reminder Lamp)to zero
ECM	B5244S4	✓	✓	✓	✓	✓	✓	
	B5254T2	✓	✓	✓	✓	✓	✓	Adaptation of the throttle unit
	B4184S11	✓	✓	✓	✓	✓	✓	
Diesel Eng	D5244T	✓	✓	✓		✓	✓	Programming the optimizing parameters
	D4164T	✓	✓	✓				
	D4204T	✓	✓	✓	✓	✓	✓	
TCM	AW55-50/51SN	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	4T65AWD							1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
	AW50/51AWD	✓	✓	✓	✓	✓	✓	1.Reset adaptation to zero 2.Resetting the counter for – Gearbox oil Change
ABS		✓	✓	✓	✓	✓	✓	Checking brake light switch adjustment
SRS		✓	✓	✓	✓	✓		
CEM		✓	✓	✓	✓	✓	✓	1.Reading alarm cause 2.Calibration of position sensor, GDL lamps
CCM		✓	✓	✓	✓	✓		1.Self-adjustment of adammer motor end stops 2.Reading-out programmed parameters
DDM		✓	✓	✓		✓	✓	1.Initialize the window
DIM		✓	✓	✓	✓	✓	✓	1.Resetting the service reminder indicator (SRI) 2.Testing all displays and lamps in instrument 3.Programming the driver information module
PDM		✓	✓	✓		✓	✓	1.Initialize the window
SWM		✓	✓	✓		✓		
PSM		✓	✓	✓	✓		✓	
PSL		✓	✓	✓				
PHM		✓	✓	✓	✓	✓	✓	
AUD		✓	✓	✓	✓			
DEM		✓	✓	✓	✓	✓		
ICM		✓	✓	✓	✓	✓	✓	
MMM		✓	✓	✓	✓			
AEM		✓	✓	✓	✓	✓	✓	

ADM		✓	✓	✓	✓	✓		
EPS		✓	✓	✓	✓	✓		
PAM		✓	✓	✓	✓	✓		
IAM		✓	✓	✓	✓	✓	✓	
AFM		✓	✓	✓	✓	✓	✓	
MPM		✓	✓	✓	✓	✓	✓	
CPM		✓	✓	✓				
CRM		✓	✓	✓				
GPS		✓	✓	✓				
SUB		✓	✓	✓				
TMC		✓	✓	✓				